

# All-digital (Digital-to-analog) System Host Quick Setup Instructions

**Press “#3” on host to enter a 6-digit password (factory default password is 666666), press “#” to enter programming, press “4” to turn left or “6” to turn right, select the function items to be set, and press “#” key to enter the settings after selection**

Setup item	Setup steps						Remark			Device model function support	
										X1H digital machine	X7 face digital machine
<b>Address settings</b>	1. Press “*” key to clear the old address code 2. Enter new 13-digit address code 3. Press “*” key to confirm						Change the host address information			Support	Support
	13-digit host address description	2 Indicate unit host	01 Indicate phase/area No.	01 Indicate buildig No.	01 Indicate unit No.	01	01	01	Default	Indicate machine No.	
<b>Admin password</b>	1. Enter the old 6-digit admin password 2. Enter the new 6-digit admin password 3. Repeat the new 6-digit admin password 4. Press “*” to confirm, press “*” key to exit						Change the admin password			Support	Support
<b>Password permissions</b>	1. Press “4” to enable, press “6” to disable 2. Press “#” key to confirm						Enable or disable the user (public) password unlocking function			Support	Support
<b>Unlock code</b>	1. Enter a new 6-digit password and press the “#” key 2. Repeat the 6-digit password and press the “#” key						Set this password to be public, and the password cannot be the same as the admin password			Support	Support
<b>Volume settings</b>	1. Press “0”, “1” and “2” to select the volume type 2. Press “4” to decrease the volume, and press “6” to increase the volume 3. Press “#” to confirm, and press “*” to exit						Change call, ring, advertisement volume			Support	Support
<b>Unlock settings</b>	1. Press “0” and “1” to select the unlocking type 2 2. Press “#” for next item, enter the unlocking delay time you want to set						When the unlocking signal is connected to the host “+ electric lock-” port, the			Support	Support

	3. Press “#” to confirm, and press “*” to exit		signal output type during unlocking is changed, power-on or power-off unlocking starts		
<b>Door sensor settings</b>	1. Press “0” and “1” to disable or enable the door sensor 2. Press “#” for next item, enter the delay time you want to set 3. Press “#” to confirm, and press “*” to exit			Support	Support
<b>Language settings</b>	1. Press “0”, “1” and “2” to select the language type 2. Press “#” to confirm, and press “*” to exit			Support	Support
<b>Date and time</b>	1. Press “0” and “1” to select the status (automatic or manual) 2. When selecting manual adjustment, press “*” to delete, and press “#” to confirm 3. Press “#” to confirm after setting is completed, and press “*” to exit		Automatic or manual clock adjustment is supported, and the device must be connected to a server to achieve automatic adjustment	Support	Support
<b>Card management</b>	Add a card	1. Press “1” to add a card 2. Enter 4-digit room number (add “0” in the front if less than 4 digits and press “#”) 3. Place the card in the swipe area to swipe 4. Press “*” to exit after adding successfully		Support	Support
	Delete a card	1. Press “2” to delete a card 2. Press “1”, “2” and “3” to select the way to delete the card 3. Press “#” to confirm the deletion 4. Press “*” to exit and return			
<b>Factory reset</b>	1. Press “#” to confirm the factory reset and wait for the host to restart			Support	Support
<b>Cloud intercom</b>	1. Press “0” and “1” to disable or enable 2. Press “#” to confirm and move to the next setting item 3. Press “#” to confirm, and press “*” to exit			Support	Support
<b>Face settings</b>	Set up	1. Press “4” or “6” to enable or disable 2. Press “#” to confirm and move to the next setting item 3. After the setting is completed, press “#” to confirm, and press “*” to exit	Enable or disable the face function, live status, and the user registration status		Support
	Registration	1. Fast registration: Press “#8” to enter the registration state while the host is in standby 2. Put the card in the swipe window, swipe the card to enter the input window			

		3. Adjust the face alignment recognition window, and press “#” to register			
	Cardless registration	1. Press “4” or “6” to select registration, press “#” to enter the prompt swipe registration prompt interface 2. Press “#” to enter the cardless face interface, enter 4 digits and press “#” key, enter 2-digit serial number and press “#” to enter the input window 3. Adjust the face alignment recognition window and press “#” to register	Face collection machine or wall machine without card to record the face is required to enter 10 digits (two digits of area code + two digits of building No. + two digits of unit No. + four digits of room No.)		
	Deletion	1. Press “5” to delete face 2. Press “1”, “2” and “3” to select the way to delete the face 3. Press “#” to confirm the deletion 4. Press “*” to exit and return			
	Synchronization	1. Select synchronization and press “#”, and wait for synchronization	The synchronization function must connect to the server, otherwise the synchronization fails		
<b>Fingerprint settings</b>	Fingerprint permission	1. Press “4” or “6” to enable or disable 2. Press “#” to confirm and move to the next setting item 3. After the setting is completed, press “#” to confirm, and press “*” to exit			
	Fingerprint synchronization	1. Select synchronization and press “#”, and wait for synchronization	The synchronization function must connect to the management software server, otherwise the synchronization fails		
	Registration fingerprint	1. Quick registration: Press “#2” to enter the registration state while the host is in standby 2. Put the card in the swipe window, and swipe to enter the input window 3. Put the finger in the fingerprint read head, and enter it successfully for 3 consecutive times		Support	Support
	Cardless registration	1. Press “4” or “6” to select registration, press “#” to enter the card registration prompt interface 2. Press “#” to enter the cardless fingerprint input interface, enter 4 digits and press “#” key, enter 2-digit serial number and press “#” key to enter the input window 3. Put the finger on the fingerprint	Face collection machine or wall machine without card to record the face is required to enter 10 digits (two digits of area code + two digits of building No. + two digits of unit No. + four digits of room No.)		

		collection head (collect 3 times) until it prompts the completion 4. Press the "*" key to exit			
	Delete the fingerprint	1. Press "1", "2" and "3" to select the way to delete fingerprints 2. Press "#" to confirm deletion 3. Press "*" to exit and return			
<b>Advanced settings</b>	Hang up the call after the intercom is unlocked	Press "#" to enable or disable conversion	Press "2" to page up, press "8" to page down		Support
	Ring time	1. After selection, press "#" to enter the setting 2. Press "*" to delete the value, enter the value you want to modify 3. Enter the value and press "#" to confirm			
	Talk time	1. After selection, press "#" to enter the setting 2. Press "*" to delete the value, enter the value you want to modify 3. Enter the value and press "#" to confirm			
	Backup method	Press "#" to enable or disable conversion			
	Video circle preview	Press "#" to enable or disable conversion			
	Display the face box	Press "#" to enable or disable conversion			
	Sleep time	1. After selection, press "#" to enter the setting 2. Press "*" to delete the value, enter the value you want to modify 3. Enter the value and press "#" to confirm			
	Tamper alarm	Press "#" to enable or disable conversion			
	DNS address	1. After selection, press "#" to enter the setting 2. Press "*" to delete the value, enter the value you want to modify 3. Enter the value and press "#" to confirm			
	Authorize server address	1. After selection, press "#" to enter the setting 2. Press "*" to delete the value, enter the value you want to modify			

		4. Enter the value and press “#” to confirm			
	Restart	Press “#” to confirm and wait for the device to restart			